

Activated functions ATMS CORE module "Server"

- Client function, administration of several Toolbase systems via a central database as different clients with the same master data

Activated dispenser types

- None